


Screw fix through base and top panel into top and bottom edges of rear support panel F.

Also screw fix through rear support panel **F** into back edges of shelf panel.

Fitting bi-fold mechanism all unit widths


Note: Locate mechanism by aligning side lugs in 5mm holes B. Pilot holes A are used to locate the

fixing screws

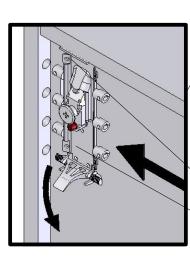

Insert left and right hand adjustable wall brackets into holes at rear of unit. Lock in place with rear lock clips and secure each bracket with screws as shown.

A wall plate and cover caps are also supplied for use with the brackets.

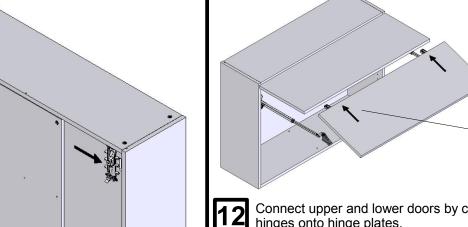

CG 0006 **IMPORTANT** Wall plates MUST




Left & right hand adjustable


wall brackets



be fixed straight

The telescopic arms adjust themselves by closing the doors. They are fastened using the centre lever. This process also adjusts the tensions in the doors.

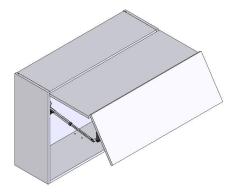


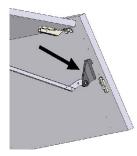


Connect upper and lower doors by clipping centre safety hinges onto hinge plates.




Clip telescopic arms onto hinge plates on rear of

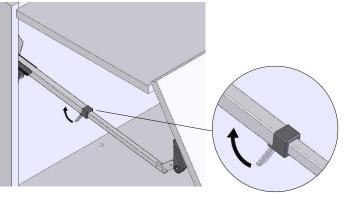


Set the desired gap between the doors by adjusting the position of the centre hinge on the hinge plate.

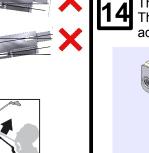


A power screwdriver can be used to properly set the lift mechanism. (Pozidriv, size 2, length 39mm) If the doors fall when let go, turn the adjuster clockwise.

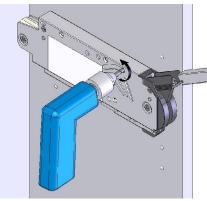

If the doors rise when let go, turn the adjuster anti-clockwise.

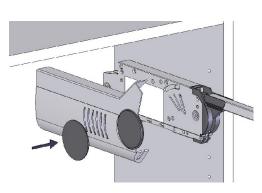


When all adjustments have been made, fit cover caps over left and right hand bi-fold mechanisms.

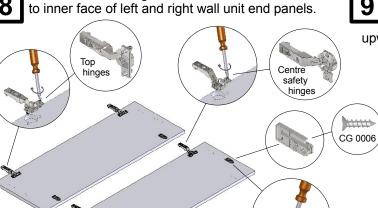

Screw fix left and right hand bi-fold mechanisms

 
Screw fix top and centre safety hinges and centre hinge plates to back of bi-fold door as shown. Also fix hinge plates for telescopic arms.




Cover cap

Wall plate

There is a danger of injury if the telescopic arm springs upward. Remove the telescopic arm rather than pushing it down.

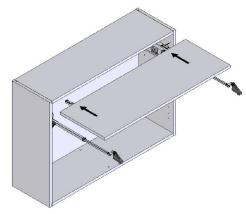


Place upper door above telescopic arms and clip top hinges onto hinge plates.

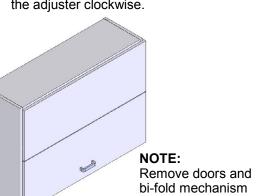

when fixing unit to wall.

Fit handles to doors. Follow standard wall unit assembly sheet for wall fixing and fitting shelves.

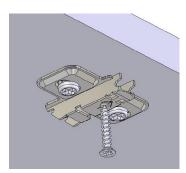

1" No6 csk Pozi

Fit Once the doors are fully adjusted it is important to fix an additional 1" No6 csk screw through the hinge plates located in the top panel and make sure the arm levers are locked in position before general use.

